Set Includes:

12 x Cup Sizes: 63 to 100.5mm

6 - Piece Filter Housing Cap Set, Sizes 24, 27, 30, 32.5, 36, 38 mm. Drive: 3/8"

2 x Universal Expandable Oil Filter Wrenches Sizes 60-80mm and 80-98mm 1/2"D

2 X Ford Ecoboost Low Profile Filter removal tools

9 - Piece Plastic Oil Drain Plug Remover Set

Instructions

Oil Filter Wrenches; Universal, 60-80mm and 80-98mm:

- Identify the oil filter location in your vehicle.
- Select the appropriate size setting on the wrench to match the diameter of your oil filter (between 60mm 80mm and 80mm-98mm).
- Slide the wrench over the oil filter, ensuring a secure fit.
- Apply steady pressure in an anticlockwise direction to loosen the oil filter.
- Once the oil filter is loose, continue turning it by hand until it can be removed completely.
- Clean the filter housing and replace the old filter with a new one.
- Tighten the new oil filter by hand until it is snug. Do not over-tighten.
- Start the engine and check for any leaks around the filter housing. If leaks are present, tighten the filter slightly until the leaks stop.

9-Piece Plastic Oil Drain Plug Remover Set:

- Locate the oil filter in your vehicle.
- Adjust the wrench size to match the diameter of your oil filter (between 80mm and 98mm).
- Slide the wrench over the oil filter, ensuring a secure fit.
- Apply firm and steady pressure in a
- counterclockwise direction to loosen the oil filter.
 Once the oil filter is loosened, continue turning
- it by hand until it can be removed completely.
- Clean the filter housing and install a new filter according to the manufacturer's instructions.
- Tighten the new oil filter by hand until it is snug. Avoid over-tightening.
- Start the engine and check for any oil leaks. If leaks are present, tighten the filter slightly until the leaks stop.

Oil Filter Wrench; 75x15, Ford 1.5/1.6 EcoBoost 74 X 14, Ford 1.0/2.0/2.3 EcoBoost

- This oil filter wrench is specifically designed for Ford vehicles with 1.5L or 1.6L EcoBoost and Ford 1.0/2.0/2.3 EcoBoost engines.
- Locate the oil filter on your Ford vehicle.
- Slide the wrench over the oil filter and make sure it fits securely.
- Rotate the wrench counter-clockwise to loosen the oil filter.
- Remove the oil filter by hand after loosening.











Oil Filter Wrench Set; 20-Piece Generation 3

- This set consists of 20 different oil filter wrenches for various applications.
- Identify the appropriate wrench from the set that matches your oil filter's specifications.
- Fit the selected wrench securely onto the oil filter
- Rotate the wrench counter-clockwise to loosen the oil filter.
- Remove the oil filter manually after loosening.















- Identify the plastic oil drain plug location in your vehicle.
- Select the appropriate tool from the kit that matches the size and type of your oil drain plug.
- Insert the selected tool into the oil drain plug and ensure a secure fit.
- Apply steady pressure in a counterclockwise direction to loosen the drain plug.
- Once the drain plug is loose, continue turning it by hand until it can be removed completely.
- Allow the old oil to drain completely into a suitable container.
- Clean the drain plug and the surrounding area, removing any debris or old gasket material.
- Install a new gasket or O-ring on the drain plug, if necessary.
- Tighten the drain plug by hand until it is snug. Avoid over-tightening.
- Dispose of the used oil properly, following local regulations.

